



Nintendo Sound Clock: Alarmo™

FAA-CLO-S-RAAAA-SAU

ENGLISH

Health and Safety Information

Please read and observe the health and safety information. Failure to do so could result in injury or damage. Adults should supervise the use of this product by children.

Nintendo may change product specifications and update this information from time to time. The latest version of this document is available at <https://www.nintendo.sa> or <https://www.nintendo.com/eu/docs> (This service may not be available in some countries.)

WARNING – Battery

- This product contains a coin battery. Do not replace the battery yourself. The battery must be removed by a qualified professional. Please contact Nintendo Customer Support for more information.
- Stop using this product if the battery is leaking. If battery fluid comes into contact with your eyes, immediately rinse your eyes with plenty of water and consult a doctor. If any fluid leaks on your hands, wash them thoroughly with water. Carefully wipe the fluid from the exterior of this product with a cloth.

WARNING – Electrical Safety

- A type A USB AC adapter supporting 7.5W (5V/1.5A) (sold separately) is required to supply power to this product.
- Do not expose this product to fire, microwaves, direct sunlight, high or extremely low temperatures.

- Do not let this product come into contact with liquid and do not use it with wet or oily hands. If liquid gets inside this product, stop using it and contact Nintendo Customer Support.
- Do not expose this product to excessive force. Do not pull on the USB cable and do not twist it too tightly.
- Do not touch this product, the AC adapter or connected devices during a thunderstorm.
- If you hear a strange noise, see smoke or smell something strange, unplug this product from the power supply and contact Nintendo Customer Support.
- Do not disassemble or try to repair this product. If this product is damaged, stop using it and contact Nintendo Customer Support. Do not touch damaged areas. Avoid contact with any leaking fluid.
- Do not touch device connectors with your fingers or metal objects.


WARNING – General

- Keep this product and packaging materials away from young children and pets. Packaging items may be swallowed. The cable can coil around the neck.
- Do not use this product within 15 centimetres of a cardiac pacemaker. If you have a pacemaker or other implanted medical device, first consult a doctor.
- Wireless communication may not be allowed in certain places such as hospitals. Please follow respective regulations.
- Do not play sound at high volume levels for long periods due to hearing damage risk. Keep the volume at a level at which you can hear your surroundings. Consult a doctor if you experience symptoms such as buzzing in your ears.
- Do not use or store this product in unstable areas.


CAREFUL USAGE

- Do not place this product in humid areas or areas where the temperature can suddenly change. If condensation forms, wait until the water droplets have evaporated.
- Do not use the product in dusty or smoky areas.
- Clean the product regularly to avoid the buildup of dust. Make sure the product is unplugged from the power supply when you clean it. Dust on plugs and cable connectors can be removed with a vacuum. To clean the LCD screen, wipe it with a soft, dry cloth. To clean the body of the product, wipe it with a soft, damp cloth, then dry it completely before using it again. Avoid using thinner or other solvents.

How to Use

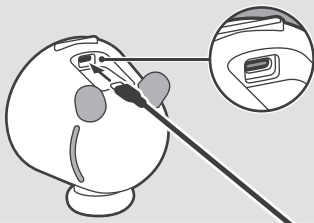

Insert the USB cable into the port on the underside of the product.

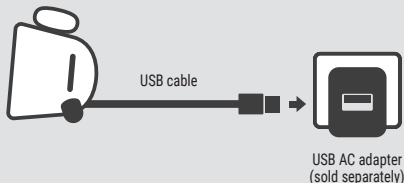

Follow the on-screen instructions to set up the product.

Nintendo Customer Support

<https://www.nintendo.sa/support>

Disposal of this Product

Do not dispose of this product or the built-in battery in household waste.
For details see <https://www.nintendo.sa/support>

or <https://www.nintendo.com/eu/docs>

The battery should be removed by a qualified professional.

Visit <https://www.nintendo.com/eu/battery> for more information.

Warranty Information

To find out how to receive warranty information, see

<https://www.nintendo.sa/support>

Technical Specifications

Nintendo Sound Clock: Alarmo	Operating frequency band(s)	Maximum radio-frequency power
WLAN	2412-2472MHz	12dBm
Sensor	24.15GHz	5.1dBm

This short range radio device is a category 1 receiver as per ETSI EN 300 440.

For explanation of the symbols and markings used on this product, see

<https://www.nintendo.com/eu/docs>

DECLARATION OF CONFORMITY

Hereby, Nintendo declares that the radio equipment type (Nintendo Sound Clock: Alarmo) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.nintendo.com/eu/docs>



Manufacturer: Nintendo Co., Ltd., Kyoto 601-8501, Japan
Importer in KSA: AIC Trading Ltd, 6312 Al Imam Saud Ibn Faisal Rd, Al Malqa, Riyadh, 13523

MODEL NO.: CLO-001

© Nintendo